



Fuse Lead installation guide




Following is the procedure to install the fuse lead

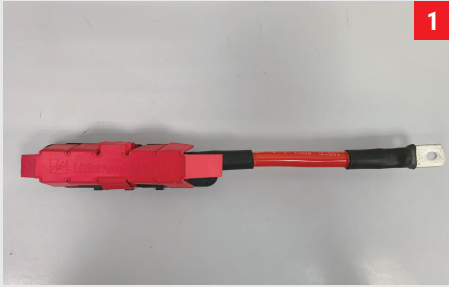


Step 1. Fuse lead

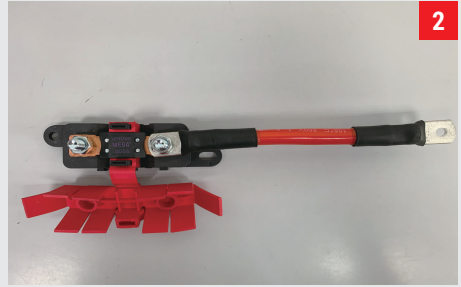


Step 2. Open the red cap.

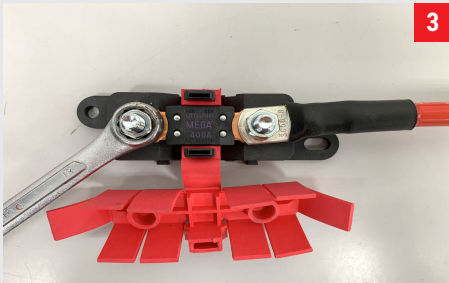

Step 3. Loosen the nut with a 13mm hexagon wrench.

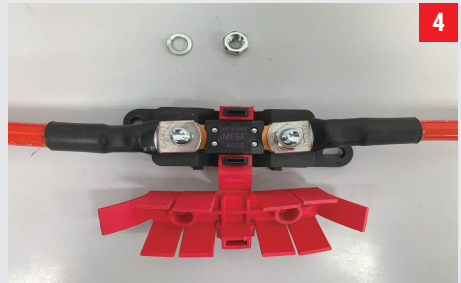

Step 4. Connect the red power lead A(+) on the control box.

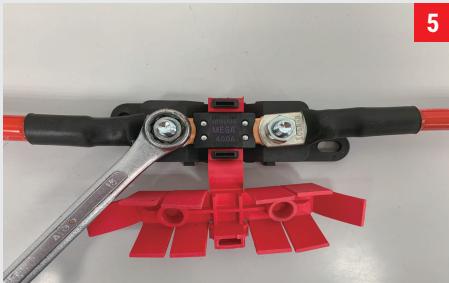

Step 5. Tighten the nut with a 13mm hexagon wrench.



Step 6. Close the red cap.