

## Pairing the wireless transmitter with the winch wireless receiver module

### Seal Slim 9.5rs and 12.5rs



Following is the procedure to pair the wireless transmitter (remote) with the winch wireless receiver module. This pairing process should be performed each time you power on your winch.



#### 1 Power on wireless transmitter

Press and hold the red power button for 6 ~ 8 seconds, until the Green LED indicator stays illuminated.



#### 2 Power on the winch wireless receiver module

Press the switch button on the control box to power on the wireless receiver module.

The alarm in the control box will begin beeping as it is waiting to be paired with the transmitter.

Note: If no action is taken to pair the wireless transmitter, the alarm will stop beeping after 60 seconds.



#### 3 Connect wireless transmitter with winch receiver module

Press the cable in or cable out button for 1~2 seconds to complete pairing process.

The LED indicator on the transmitter will blink while pairing.

Once the transmitter is successfully paired, the winch alarm will sound a 5 second long beep and then stop. The wireless transmitter is now paired and ready to operate your winch.

## Powering off the winch receiver module and the wireless transmitter



#### 1 Power off wireless transmitter

Press and hold the red power button for 6 ~ 8 seconds to power off the wireless transmitter.

The transmitter LED indicator turns off.

Note: The wireless transmitter will shut off automatically if left idle for 5 minutes.



#### 2 Power off wireless receiver module

Press the switch to power off the receiver.

The light on the switch turns off.

#### Note:

1. The wireless transmitter will shut off automatically if left idle for 5 minutes.
2. The LED indicator on transmitter will turn blinking green when transmitter battery is low.
3. The LED indicator on transmitter will turn blinking red when the connection is poor.
4. The power button of the transmitter also works as an emergency stop function while the wireless control is in operation. While the wireless control is in operation (either cable in or cable out, the red light is on), once power button pressed, the wireless control will be forced to power off immediately. The winch will stop running.