



Following is the procedure to pair the wireless transmitter (remote) with the winch wireless receiver module. This pairing process should be performed each time you power on your winch.



1 Power on wireless transmitter

Press and hold the red power button for 5 seconds, until the Green LED indicator stays illuminated.



2 Power on the winch wireless receiver module

Press the on/off switch of the winch to power on the wireless receiver module. The battery voltage reading will be shown on the screen. The alarm in the winch will begin beeping as it is waiting to be paired with the transmitter.

Note: If no action is taken to pair the wireless transmitter, the alarm will stop beeping after 10 seconds.



3 Connect wireless transmitter with winch receiver module

Press the cable in or cable out button of transmitter for 1 ~ 2 seconds to complete pairing process. The LED indicator on the transmitter will blink red light while pairing.

Once the transmitter is successfully paired, the winch alarm will sound a 5 second long beep, and then stop. At the same time, the wireless blue icon on the display screen will be off. The wireless transmitter is now paired and ready to operate your winch.

The wireless transmitter needs to be paired with winch receiver module within 10 seconds. If the pairing fails, restart the power supply and pair again.

Powering off the winch receiver module and the wireless transmitter



1 Power off wireless transmitter

Press and hold the red power button for 5 seconds to power off the wireless transmitter. The transmitter LED indicator will be off accordingly. The wireless blue icon on the display screen will be off too.

Note: The wireless transmitter will be shut off automatically if left idle for 5 minutes.



2 Power off wireless receiver module

Press the switch to power off the receiver. The light on the display screen will be off.